

Quick Start Guide


ZYXEL ENGLISH

VMG8823-BX0B
Dual-Band Wireless AC/N VDSL2
VoIP Combo WAN IAD




- EN ①** Use the gray phone cable to connect the DSL port to a DSL splitter (1-a) or directly to the telephone wall outlet.
OR
Use an Ethernet cable to connect the WAN port to a gateway modem (1-b).

Hardware Connections

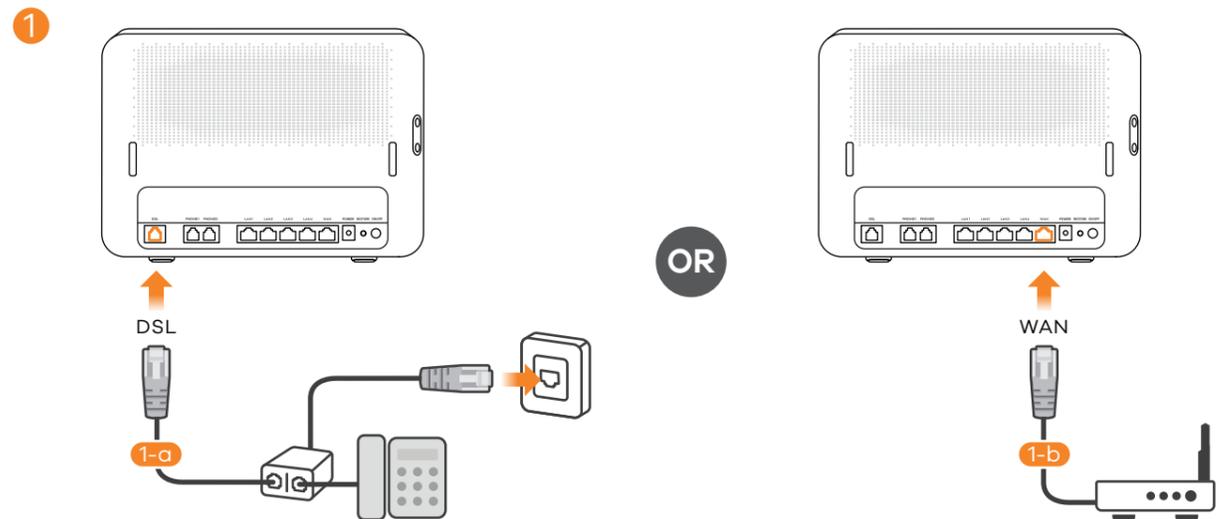


- EN ②** Connect a phone to the phone port using the phone cable.
③ Connect a computer to the LAN port using the yellow Ethernet cable.
④ Connect the power cable to the modem and press the power button.

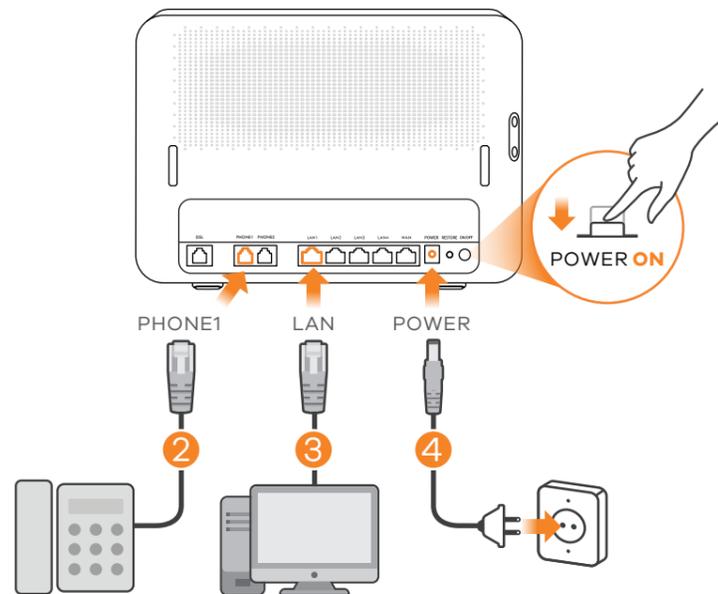


- EN ⑤ INTERNET LED (5-a)**
OFF - The Internet connection is not ready. GO to Internet Setup.
PHONE LED (5-b)
OFF - The VoIP registration is not complete. Configure VoIP settings.

Check the LEDs

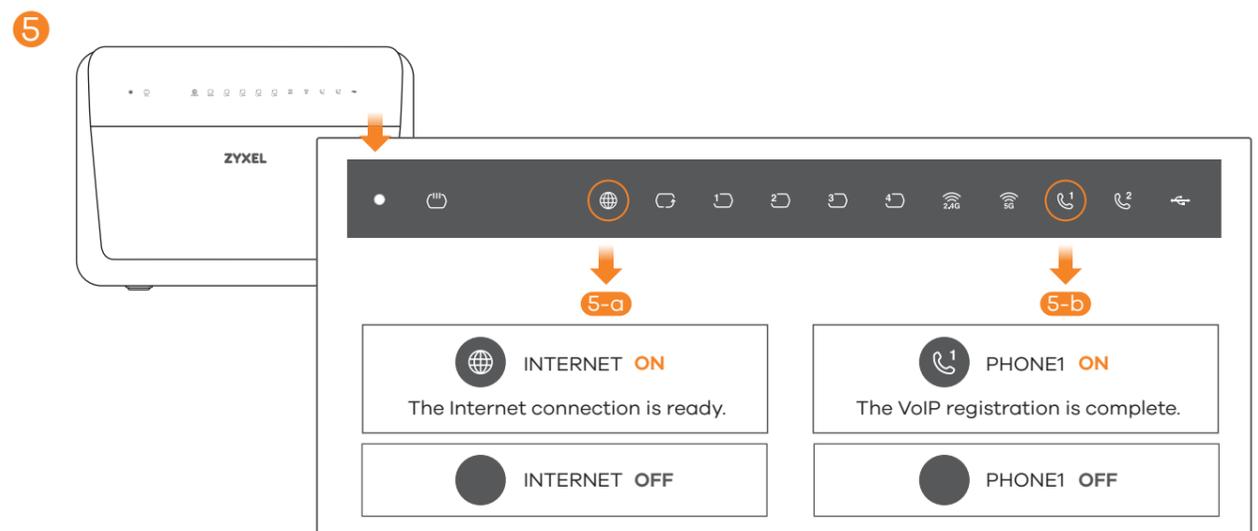

- EN** Place your hand no more than 10 CM over the Zyxel Logo for active LEDs to light up for 30 seconds (after you move your hand away).

Proximity Sensor

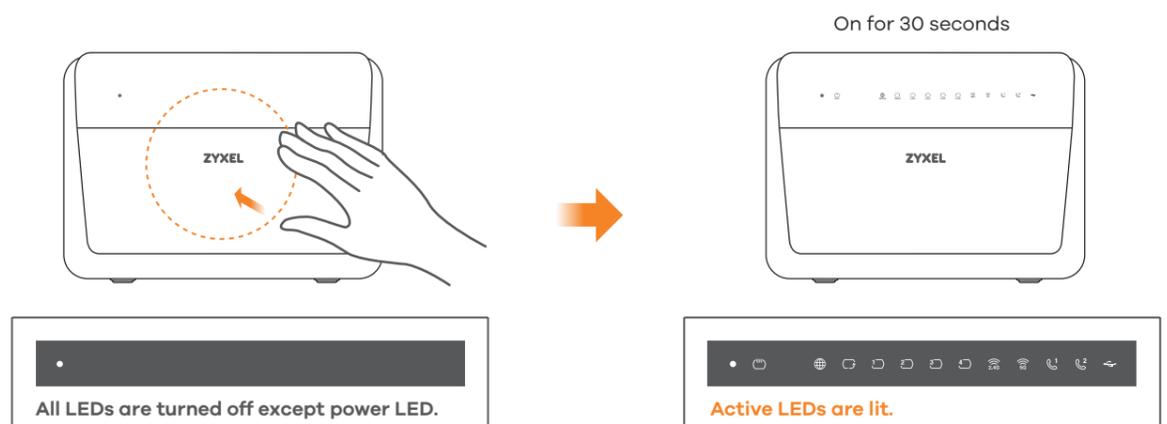

Quick Start Guide

ZYXEL ENGLISH

VMG8823-BX0B
Dual-Band Wireless AC/N VDSL2
VoIP Combo WAN IAD




EN Open a web browser and go to <http://192.168.1.1>. Enter the default **user name (admin)** and **password (1234)**, and then click **Login**.

Internet Setup

<http://192.168.1.1>

User Name : **admin**
Password : **1234**
(default)

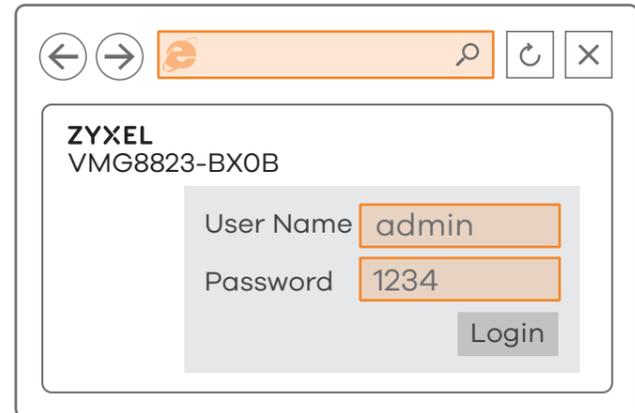

EN WPS

- Press the WPS button until the WiFi 2.4G and 5G LEDs light up in orange.
- Press the WPS button on the client.


No WPS

- The SSID and Wireless key are on the device sticker.
- Find the device with this SSID. Enter the Wireless key to connect.

Wireless Setup / WPS




Wireless Setup / NO WPS

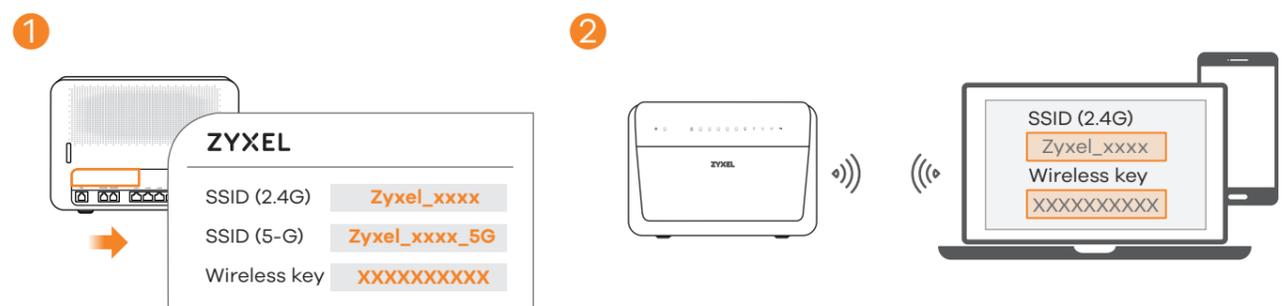

EN

- Connect the stand with the bracket holes facing up.
- Place the device vertically on a smooth level surface.

Desktop Installation

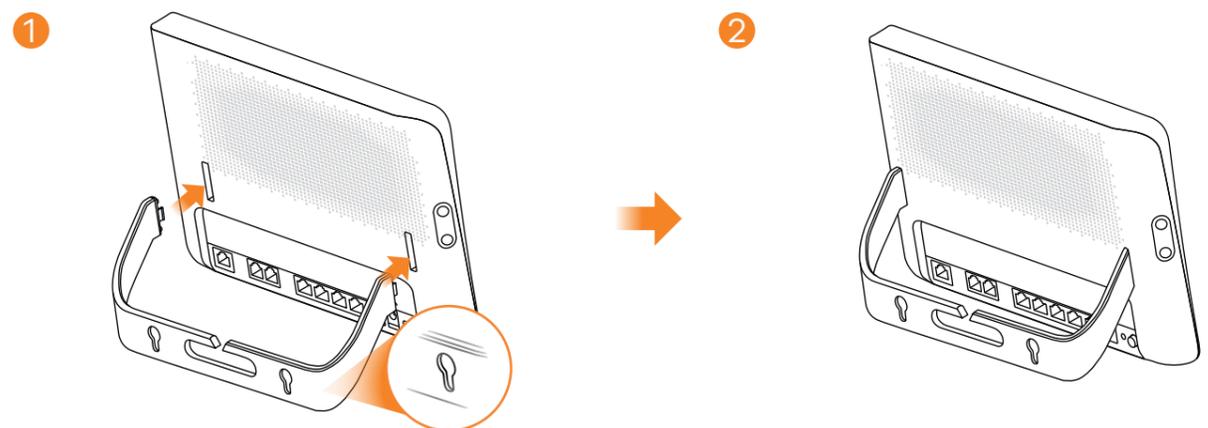

EN Drill two holes at the distance of 115mm apart. Insert screw anchors and screws (not provided) into the holes. Attach the bracket to your VMG8823-BX0B with the bracket holes facing down. Hang it on the screws.

Wall Mounting

